




**1854475 X- HERNING HEADBOARD- KG**  
**1854462 X- HERNING HEADBOARD-QN**

**Parts List**


A.	Headboard	1 pc
B.	Allen Head Bolts	4 pcs
C.	Nuts	4 pcs
D.	Lock Washers	4 pcs
E.	Flat Washers	8 pcs
F.	Allen Head Wrench	1 pc
G.	Spanner	1 pc

- \* Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- \* Use the hardware illustrations to determine correct piece and size.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item is to be assembled by an adult and is not intended to be taken apart by a child.


**Hardware Illustrations**

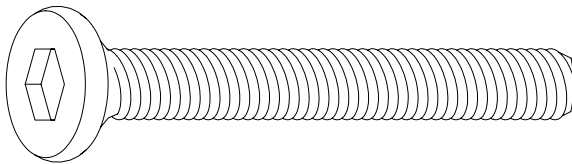


**B. Allen Head Bolt**

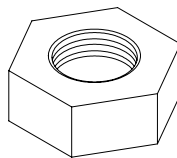

**C. Nut**



**D. Lock Washer**



**E. Flat Washer**



**1854475 X- HERNING HEADBOARD- KG**  
**1854462 X- HERNING HEADBOARD-QN**

**Assemble the Headboard to Metal Frame (Sold Separately)**

**Attention:** Make sure you have assembled the metal frame (sold separately) before assembly to the headboard.

**Attach Headboard (A) to brackets** Align the pre-drilled holes in the post of Headboard (A) with the holes on the metal bracket ends. Headboard should sit flush to the floor once it is attached. Insert Allen Head Bolts (B) with Lock Washers (D) and Flat Washers (E), into the back of the posts of Headboard (A) through the holes in the metal bracket ends. Secure with Flat Washers (E) and Nuts (C) using Spanner (G) and Allen Head Wrench (F). See illustration.

